


1.3.4 Berechtigungen


Sie benötigen mindestens "Maintainer"-Rechte, um Berechtigungen zuzuweisen.

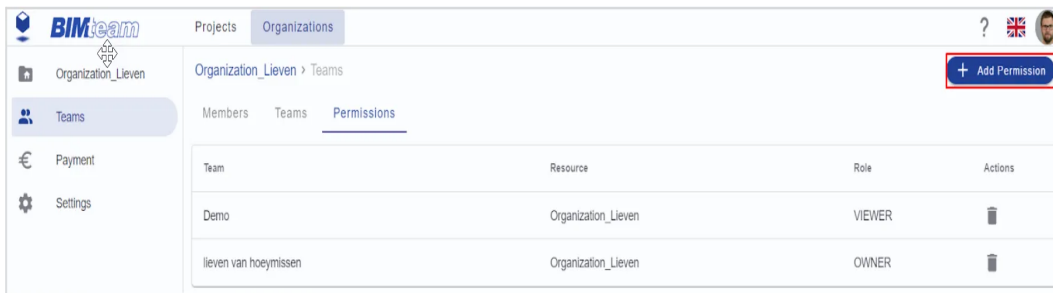

The screenshot shows the BIMteam interface. The top navigation bar includes 'Projects' and 'Organizations'. The left sidebar has 'Organization_Lieven', 'Teams', 'Payment', and 'Settings'. The main content area is titled 'Organization_Lieven > Teams' and has tabs for 'Members', 'Teams', and 'Permissions'. A table lists team members with columns for 'Team', 'Resource', 'Role', and 'Actions'. A red box highlights the '+ Add Permission' button in the top right corner.

Team	Resource	Role	Actions
Demo	Organization_Lieven	VIEWER	
lieven van hoeymissen	Organization_Lieven	OWNER	

Unter "Berechtigungen" können Sie über die Schaltfläche "Berechtigung hinzufügen" Berechtigungen für einzelne Mitglieder oder für Teams hinzufügen.

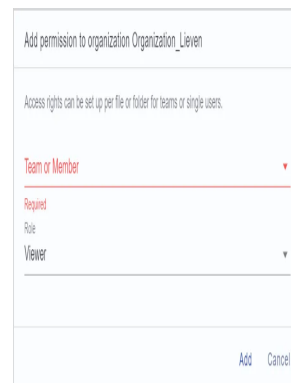

The modal dialog is titled 'Add permission to organization Organization_Lieven'. It contains a sub-header 'Team or Member' with a dropdown arrow. Below it, the 'Required' role is set to 'Viewer' with a dropdown arrow. At the bottom right, there are 'Add' and 'Cancel' buttons.

Add permission to organization Organization_Lieven

Access rights can be set up per file or folder for teams or single users.

Team or Member

Required
Role