


# 3.1 IFC structure

The IFC Structure window is always activated and is listed in the Links menu:

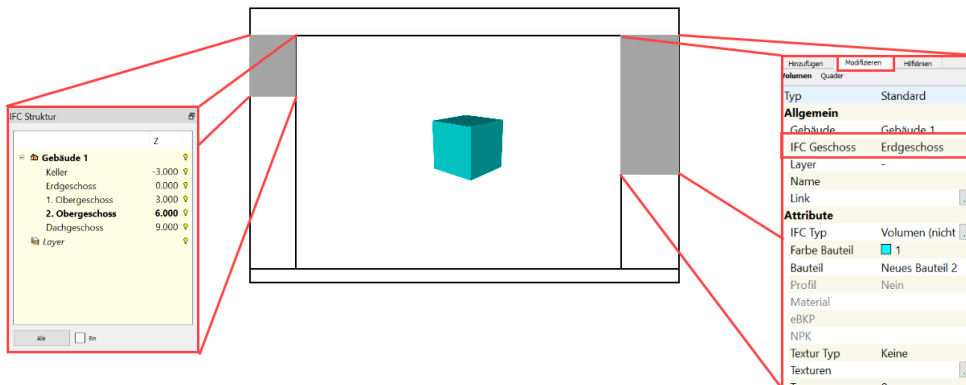

With the right mouse button R in the IFC window:

- additional floors can be added
- the name of an entry can be changed


Double-click L on a floor to make it the active floor (the activated floor is displayed in bold).

- All newly added elements are directly assigned to the active bullet.

Active elements can be assigned to another bullet under Modify


## IFC Tree Structure

The IFC tree structure can be called up in the menu at the top in the "Dialog" area:

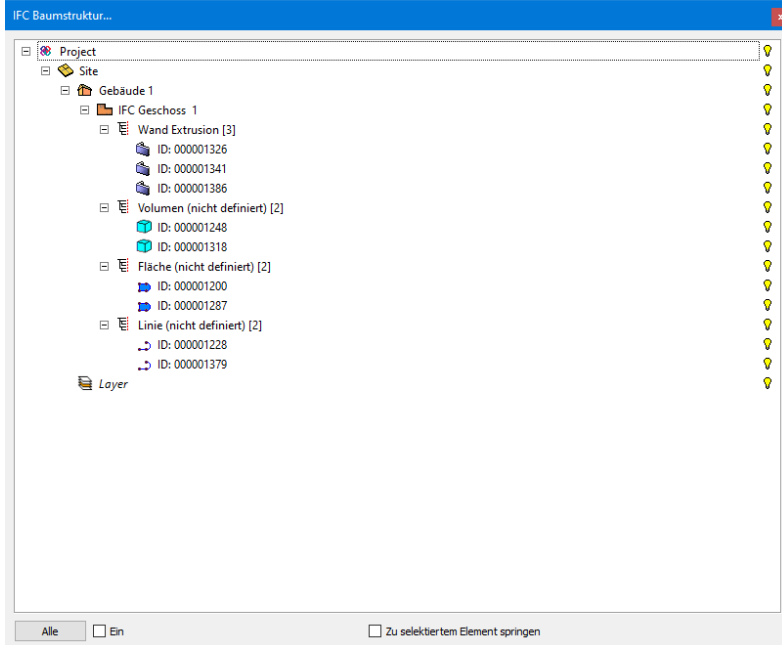

## IFC Type

In order to export elements in the IFC structure, they must have an IFC type. Correct IFC type is important so that dimensions, property sets, etc. are correct.

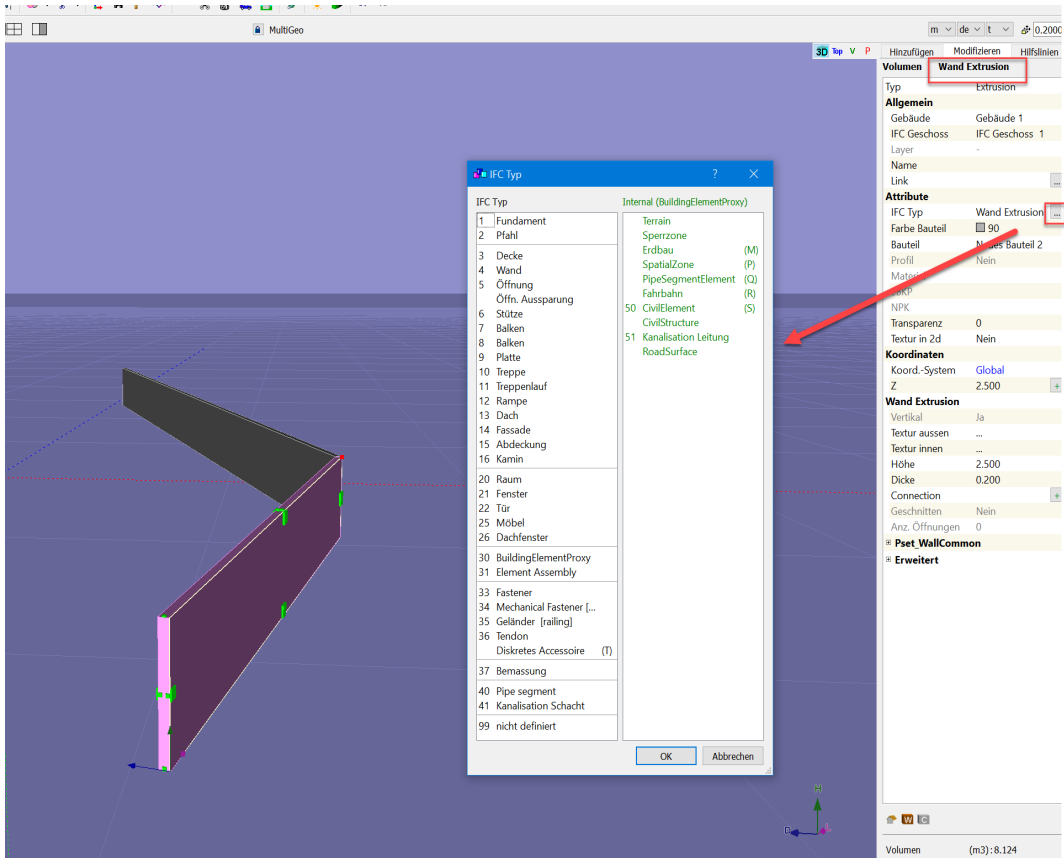

Volumen (m3): 8.124