6.1.2 Modeling from PDF 1

Video Tutorial

Description

PDF

PDF points can be displayed via the control box in the status bar

Ceilings and similar elements:

- 1. draw area
- 2. add or remove additional points --> modification toolbar ^{±P} & + or -
- 3. cut openings --> toolbar cut or cut through

 ▼

 ¾
- 4. convert surface into a volume --> modification toolbar
- 5. set Z-height in Modify area
- 6. define inclination
 - element converted into a mesh (modification toolbar)
 - Stretch individual points with key 7
 - Set the bend angle in the Modify area to 0 so that all 3 corners are visible. Then flip edges if necessary.

Walls:



2. two walls can be connected (modification toolbar) or an end angle can be defined (modify area)

- 3. add openings
- 4. openings specially
- Model opening , weld if necessary
- Define volume as IFC type Opening (In the Modify area) and then select the wall as a connecting element

*Shortcut: If several slabs have been modelled, the slabs can be cut with the touching walls. Activate all ceilings and press key C + W + A, then the ceilings cut volumes into the walls. This way the height of the walls does not have to be modelled individually.