
5.70 export BIMteam


In order to use BIMteam, a user account is required and the code "89 BIMteam" must be activated in lexocad.

For a model to be downloaded via Lexocad, at least one project must be created in BIMteam.

In Lexocad, you must log in to the account once and select a project folder for a model to be uploaded:

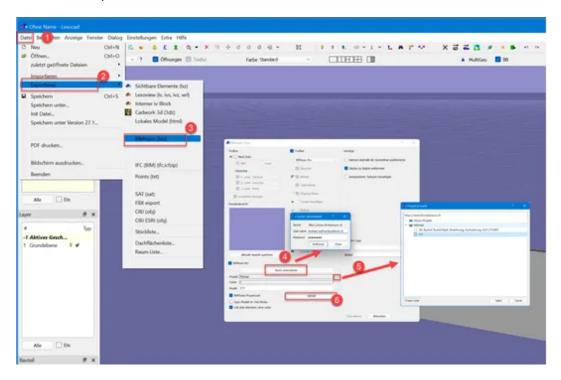

Here is some additional information about BIMteam and the viewer:

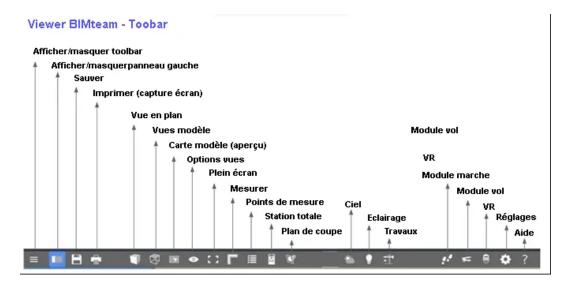

Platteforme BIMTeam - Management des données et collaboration Upload possible depuis différents types de fichiers (jpg, pdf, txt, ...) Upload depuis des fichier BIMteam (bte) Aperçu activités Réglages projet Personnaliser accès Personnaliser accès Partager le modèle via le lien Ajouter commentaire Ajouter commentaire Ajouter commentaire