


4.1.12 Move

Key **5** ? move

The **5** key is u

ment is moved using

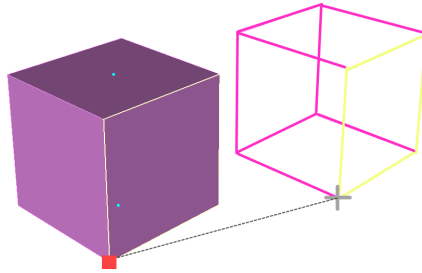

the active point.


The following other options can be used in combination with the **5** key:

Move (L) point / **M** **X Y Z** **H** horizontal **D** Distance **V** Vector **Q** local axis **3** Rotate 90 **W** Rot X **E** Rot Y **R** Rot Z **S** Symmetry **K** Edge **Arrow-keys**

The "Move" icon is located in the toolbar



When an item is active and the "copy" icon is pressed, various copy options are displayed in a new window:

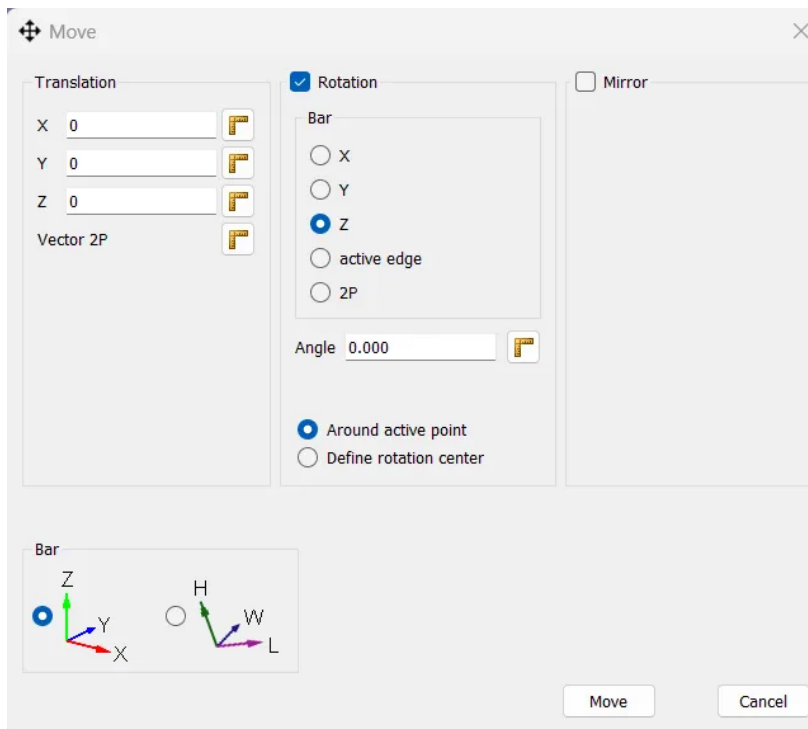

Several elements with different Z heights can be moved to the same Z height.

Activate all elements --> Move toolbar --> Align Z --> Enter Z height --> Move

