



## 1.30 Wood user

### 1. Enable the option "Wood user":


Go to "Settings" ? "Options".

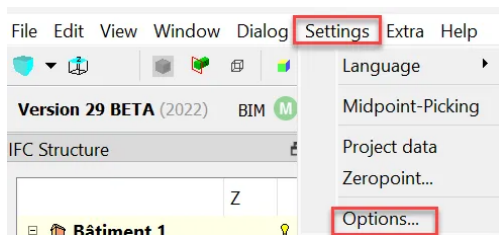


Then check the option "Wood user".

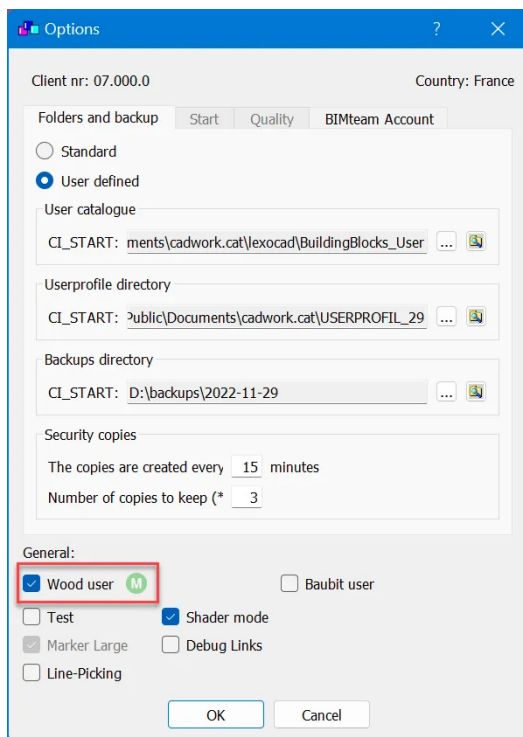

This option allows to communicate directly with cadwork 3d through an export, using the icon "export cadwork 3d" in the toolbar (on the top right).

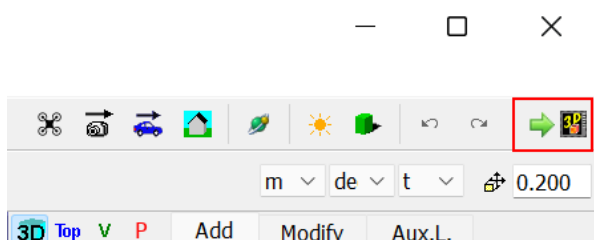

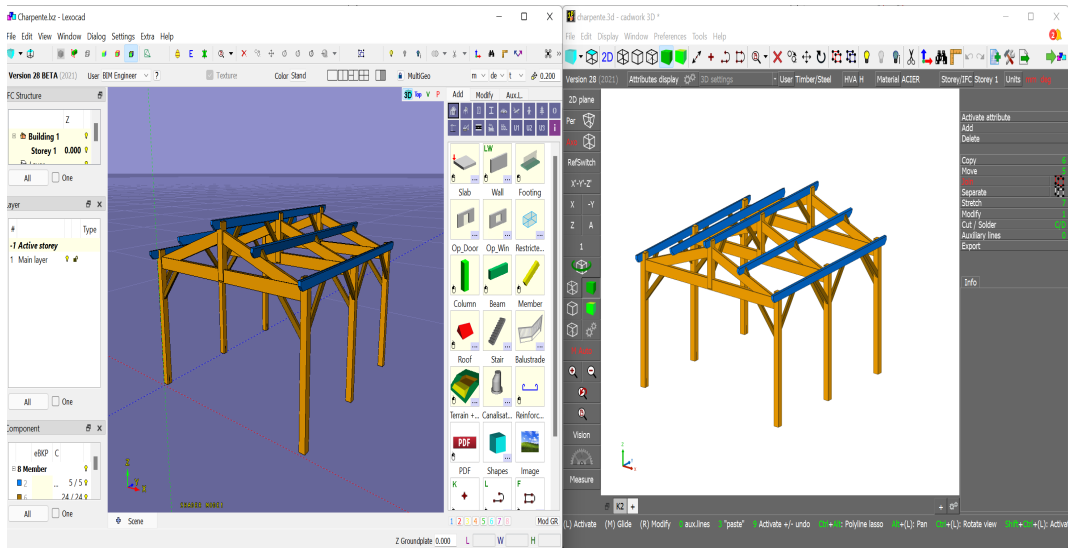

## 2. Working with subgroups (as in cadwork 3d):

Go to "Window" ? "Subgroup".

