

4.1.18 Switching the zero rotation

The function "Rotate zero point" is located in the toolbar:



This function is used to rotate the axis. Setting the zero point is a useful function when you need to add or edit elements that are not parallel to the X/Y axis. It is possible to set the zero point with the mouse.

Mouse button R on the function ? In the zero point window, click on the measurement icon ? Determine X or Y by 2 points ? The new axis is defined

