6.1.12 Determination of the duration of stage


Tutorial video

Description

Initial situation: A model whose quantities were determined with the LME dialog and which is linked to the 4D Stages dialog.

1. enter power values in LME to calculate duration


- Structure stages choose
- Enter power values
- The duration is calculated based on the quantity and power values

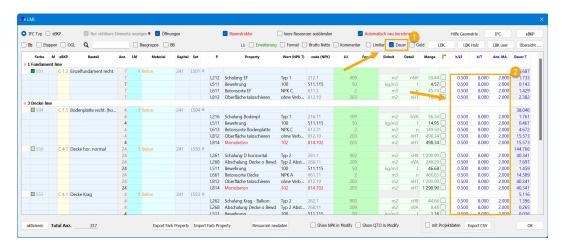

For your information: It is also possible to predefine the power values in the LBK User.

2. load duration from LME in 4D stages

- Activate "LME_4D" in the 4D stages window
- Click Update LME 4D button
- Update duration --> OK

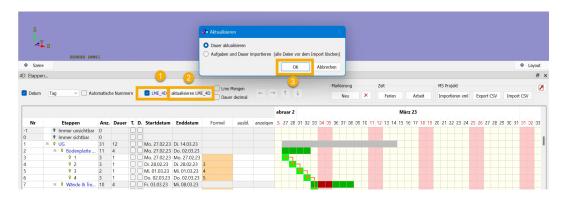

The duration information defined in the LME dialog will be transferred to the 4D Stages window.