
6.1.5 Quantity Protocol from model 2

Video:

Description

Dialog: LV dimension protocol

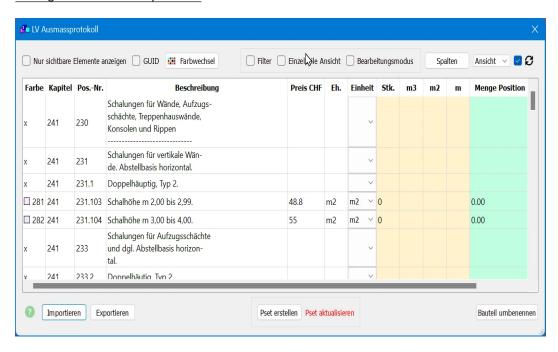

Measuring functions

- FF (create area (activate area))
- F (draw area)
- L (Draw line. Line thickness can be set in the modification area)
- LL (create line (activate facet))
- L & F (create line outline on surface)
- C, D (cut through)
- 6 (Copy)
- 7 (routes)