

3.2 List output

A file of the type *.cwl.m is generated and opened in the cadwork list module.

Have the position numbers never been calculated before for certain element, those elements will have position number <0> assigned.

If no starting number is defined, the numbering starts at 0 as default.